


CM32 Connector

p.1

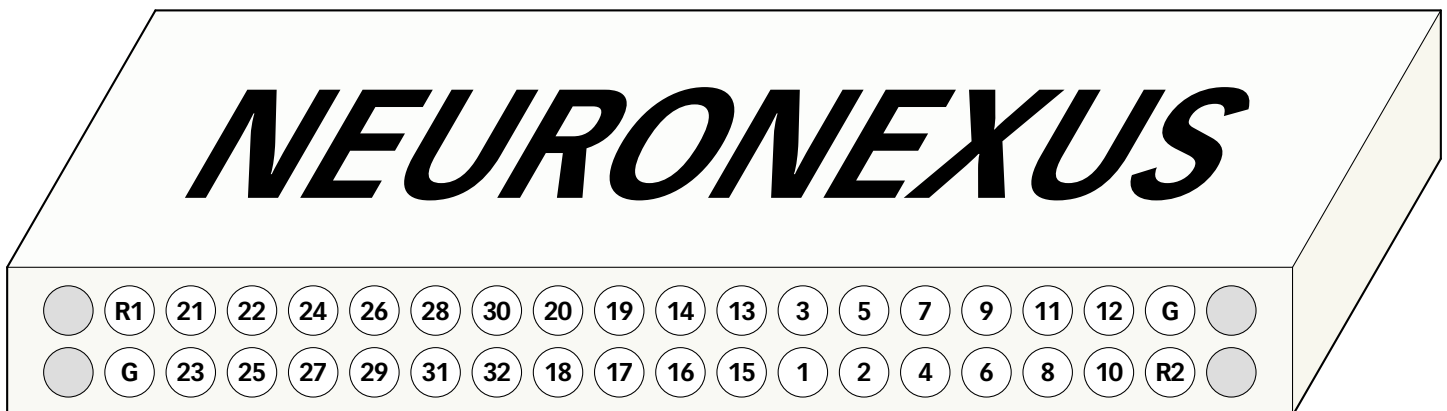

NOTE: Print may vary on the CM32 connector.

- Versions with one side with "Omnetics" printed and one blank side: the "Omnetics" side is oriented up
- Versions with one side with "NeuroNexus" printed and one side with "Omnetics" and a batch number printed: the "NeuroNexus" side is oriented up

G = Ground
R = Reference

SPECIFICATIONS



Connector Omnetics 36 Position Dual Row Male Nano Miniature Connector (4 guideposts)

Mating Connector Omnetics 36 Position Dual Row Female Nano Miniature Connector (4 guideposts)

Note: For proper grounding, please use the correct wiring configuration for your probe

Reference Channel Configuration (Gen. 4)

p.2

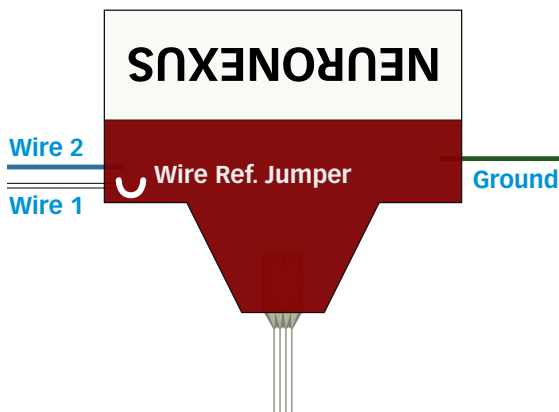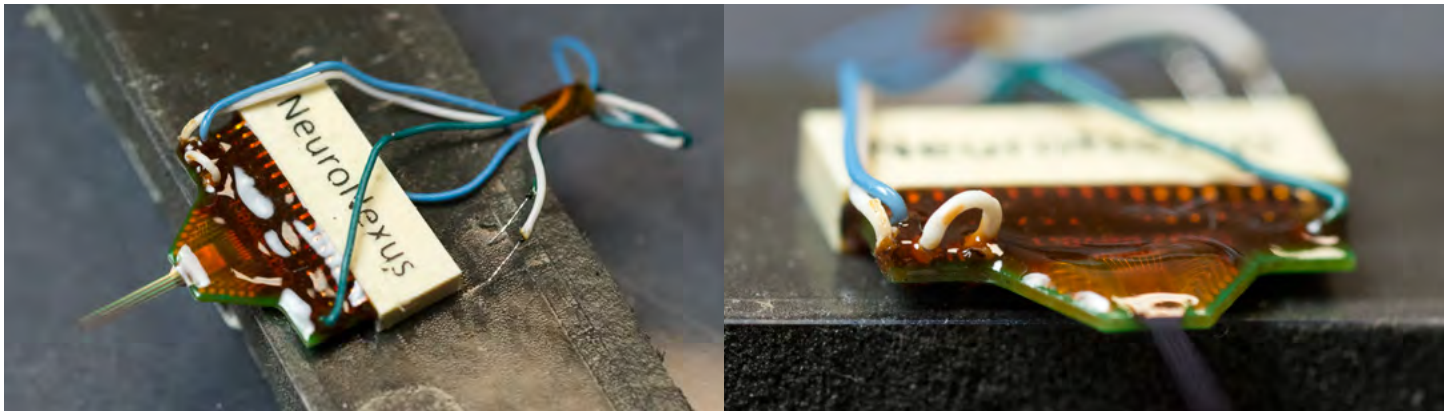

The CM32 Gen. 4 package has 1 insulated wire loop jumper (see above) and 3 colored insulated wires. The Ground wire is green. **Please read fully before making your desired changes - it may not be possible to reconnect the wire loops once they have been cut.**

NeuroNexus recommends taking one of the following reference configuration options. **You must choose one option (see below) and act accordingly or a ground loop may form.**

If your probe has a Probe Reference site, and you want to use it, follow these instructions:

1. **Cut** Wire 1 (white)
2. Channel R1 serves as the Probe Reference. Wire 2 (blue) connects an external reference to Channel R2; if you do not want to use an external reference, cut Wire 2.

To use only 1 external reference source, follow these instructions:

1. **Cut** the Wire Reference Jumper
2. Tie Wire 1 and Wire 2 together. Channels R1 and R2 both serve as the external reference.


To use 2 external reference sources, follow these instructions:

1. **Cut** the Wire Reference Jumper
2. Channels R1 and R2 serve as independent external references. Wire 1 (white) feeds into Channel R1, and Wire 2 (blue) feeds into Channel R2.

Note: For proper grounding, please use the correct wiring configuration for your probe

Reference Channel Configuration (Gen. 3)

p.3

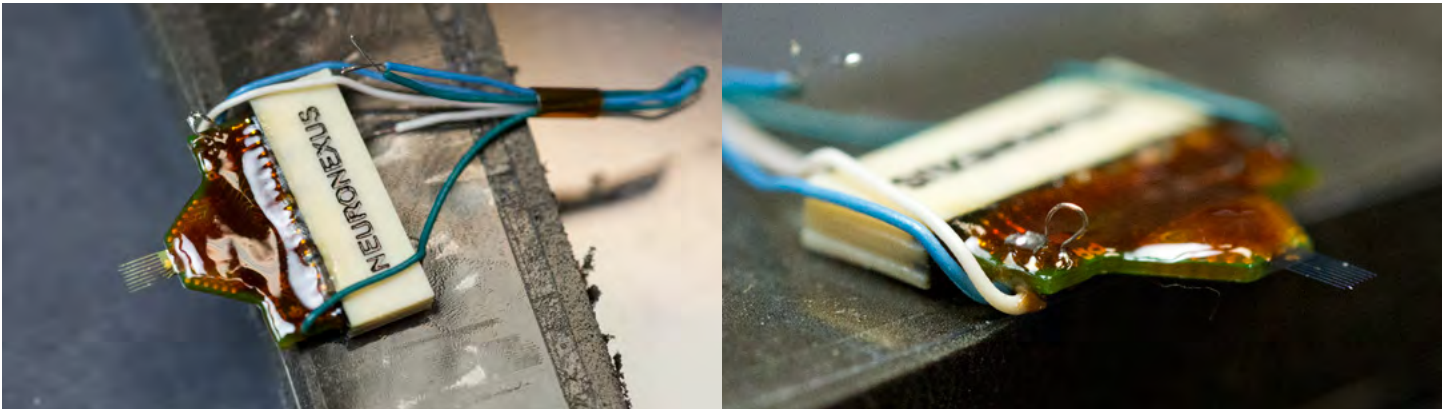

The CM32 Gen. 3 package has 2 bare wire loop jumpers and 3 colored insulated wires. The Ground wire is green.

If your probe has a Probe Reference site, and you want to use it, follow these instructions:

1. **Cut** Wire Reference Jumper 2
2. **Cut** Wire 1 (white)
3. Channel R1 serves as the Probe Reference. Wire 2 (blue) connects an external reference to Channel R2; if you do not want to use an external reference, cut Wire 2.

To use only 1 external reference source, follow these instructions:

1. Cut Wire Reference Jumper 1
2. Cut Wire 1. Channels R1 and R2 both serve as the external reference.

To use 2 external reference sources, follow these instructions:

1. Cut both Wire Reference Jumpers
2. Channels R1 and R2 serve as independent external references. Wire 1 (white) feeds into Channel R1, and Wire 2 (blue) feeds into Channel R2.

Note: For proper grounding, please use the correct wiring configuration for your probe

Reference Channel Configuration (Gen. 2)

p.4



The CM32 Gen. 2 package has no wire loop jumpers (see above) and 2 bare wires, both located on one side of the package. The Ground wire is designated with black shrink wrap.

IMPORTANT: Check our catalog to see if your probe model has a probe reference (PR) site.

If your design has a PR site, and you plan on using it:


1. **Cut** the Reference wire (the Reference wire does *not* have black shrink wrap)
2. Make sure that the PR site is completely implanted
3. Reference channels R1 and R2 function as the Probe Reference

If your probe does not have a PR site, connect the Reference wire to your external reference source. Reference channels R1 and R2 function as the External Reference.

Note: For proper grounding, please use the correct wiring configuration for your probe

Reference Channel Configuration (Gen. 1)

p.5

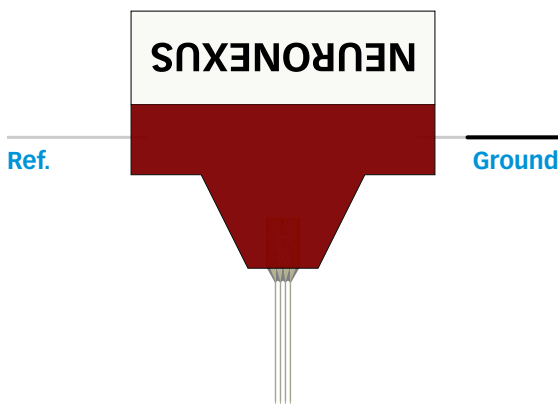

The CM32 Gen. 1 package has no wire loop jumpers (see above) and 2 bare wires, located on opposite sides of the package. The Ground wire is designated with black shrink wrap.

IMPORTANT: Check our catalog to see if your probe model has a probe reference (PR) site.

If your design has a PR site, and you plan on using it:


1. **Cut** the Reference wire (the Reference wire does *not* have black shrink wrap)
2. Make sure that the PR site is completely implanted
3. Reference channels R1 and R2 function as the Probe Reference

If your probe does not have a PR site, connect the Reference wire to your external reference source. Reference channels R1 and R2 function as the External Reference.



A1x32


p.6

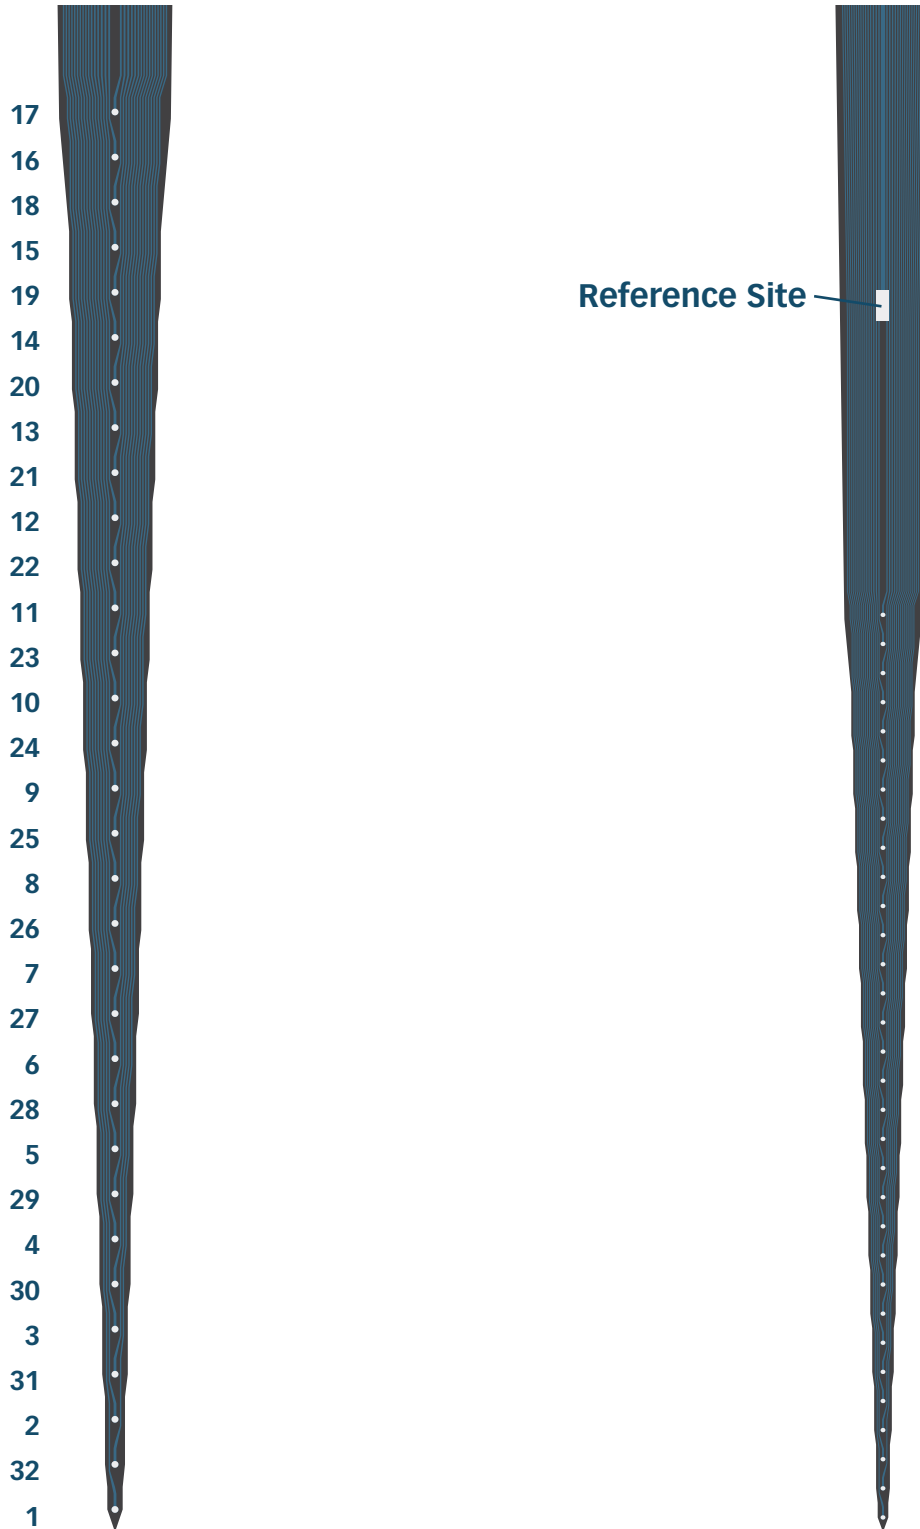



A1x32-Edge


p.7

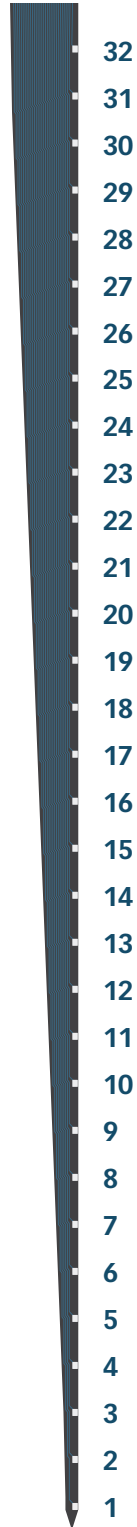



A1x32-Poly2


p.8

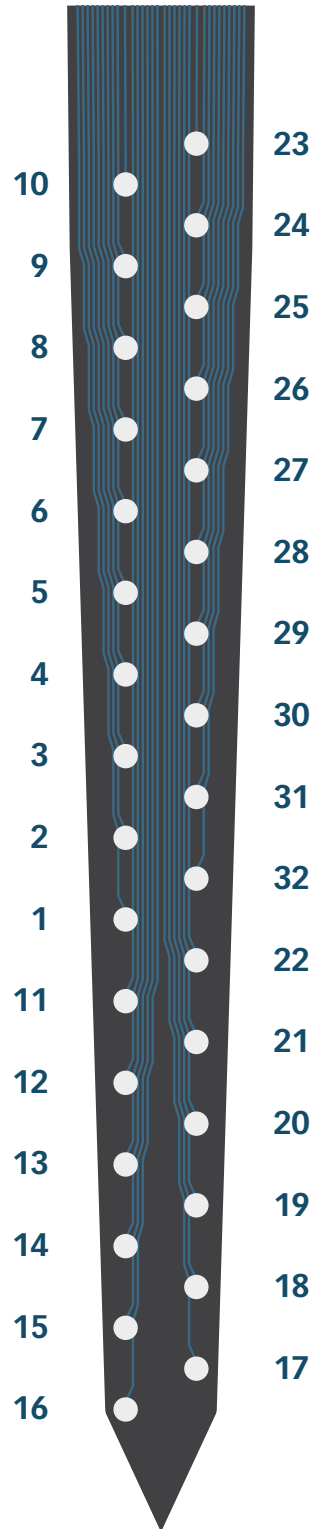



A1X32-Poly3-5mm-25s-177
A1X32-Poly3-10mm-25s-177


p.9

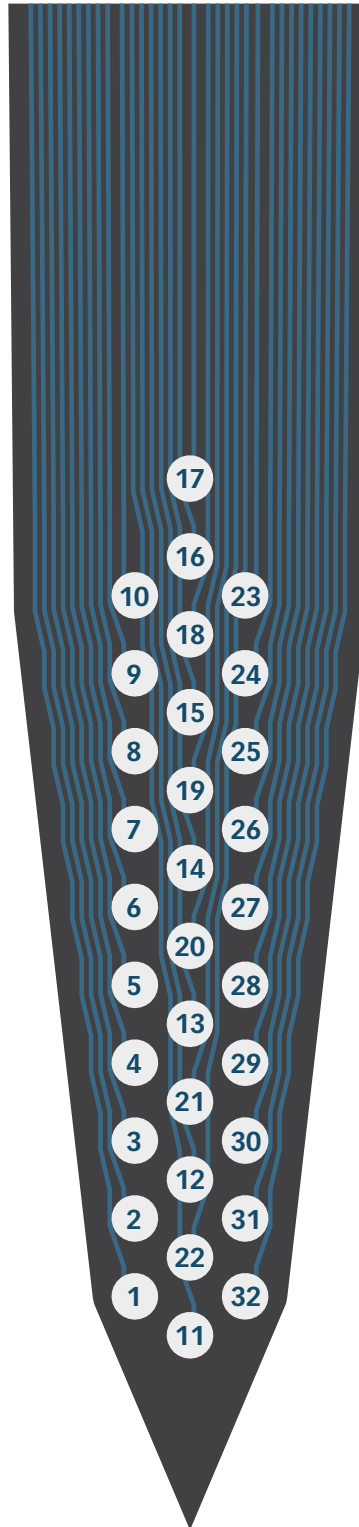



A1x32-Poly3-6mm-50-177


p.10

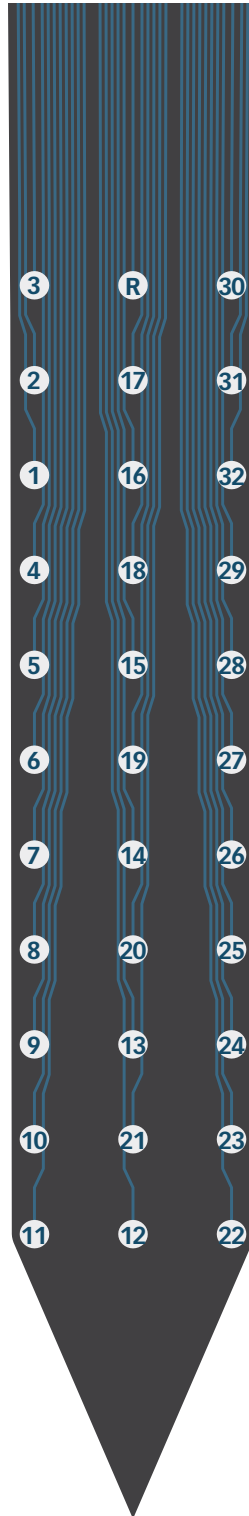



A1x32-Poly3-10mm-50-177


p.11

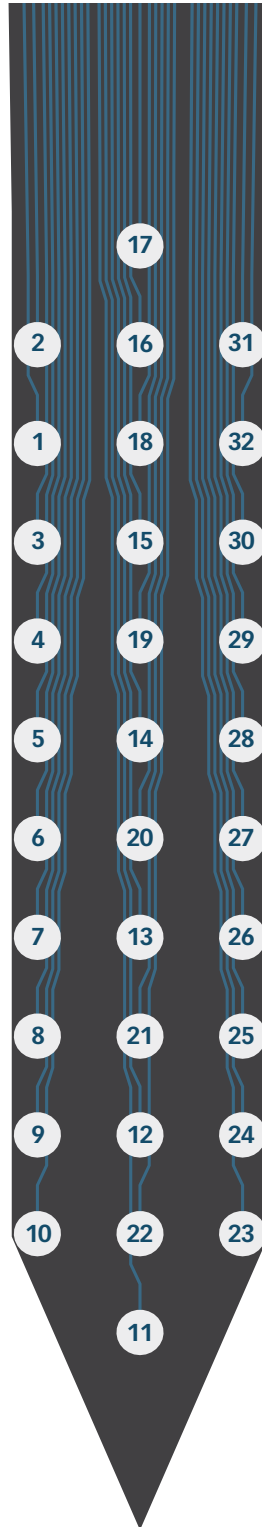



A2x16


p.12

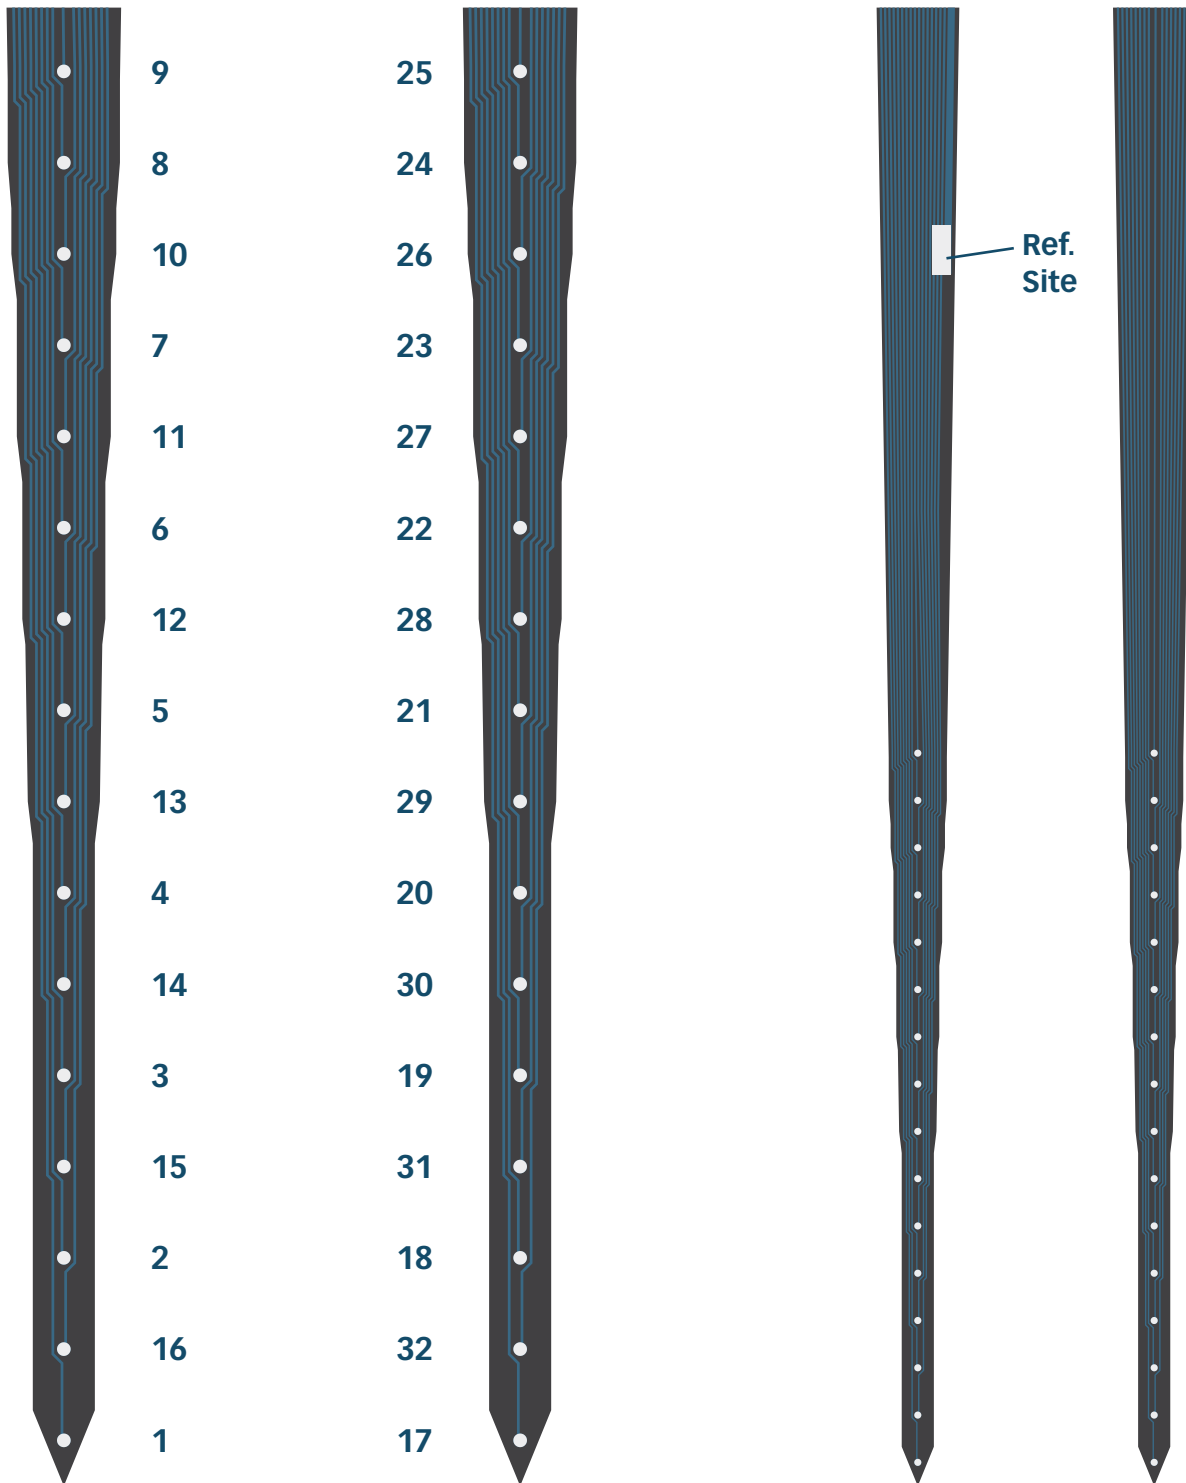



A4x8


p.13

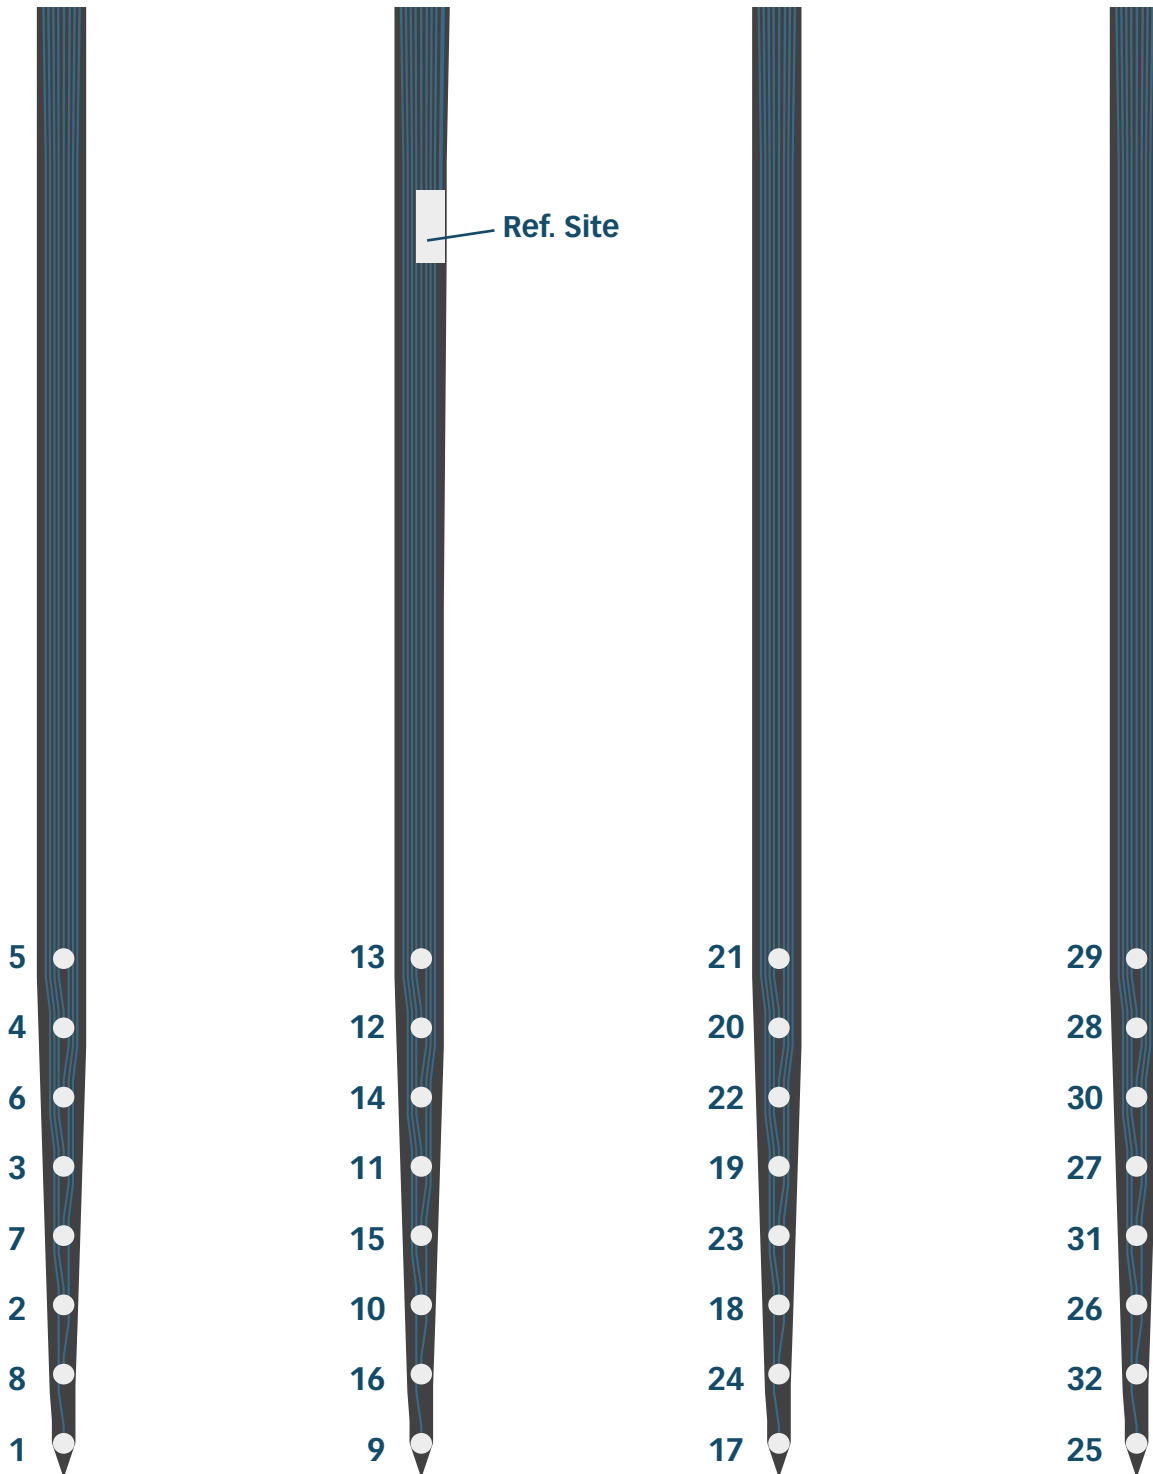



A4x2-tet


p.14

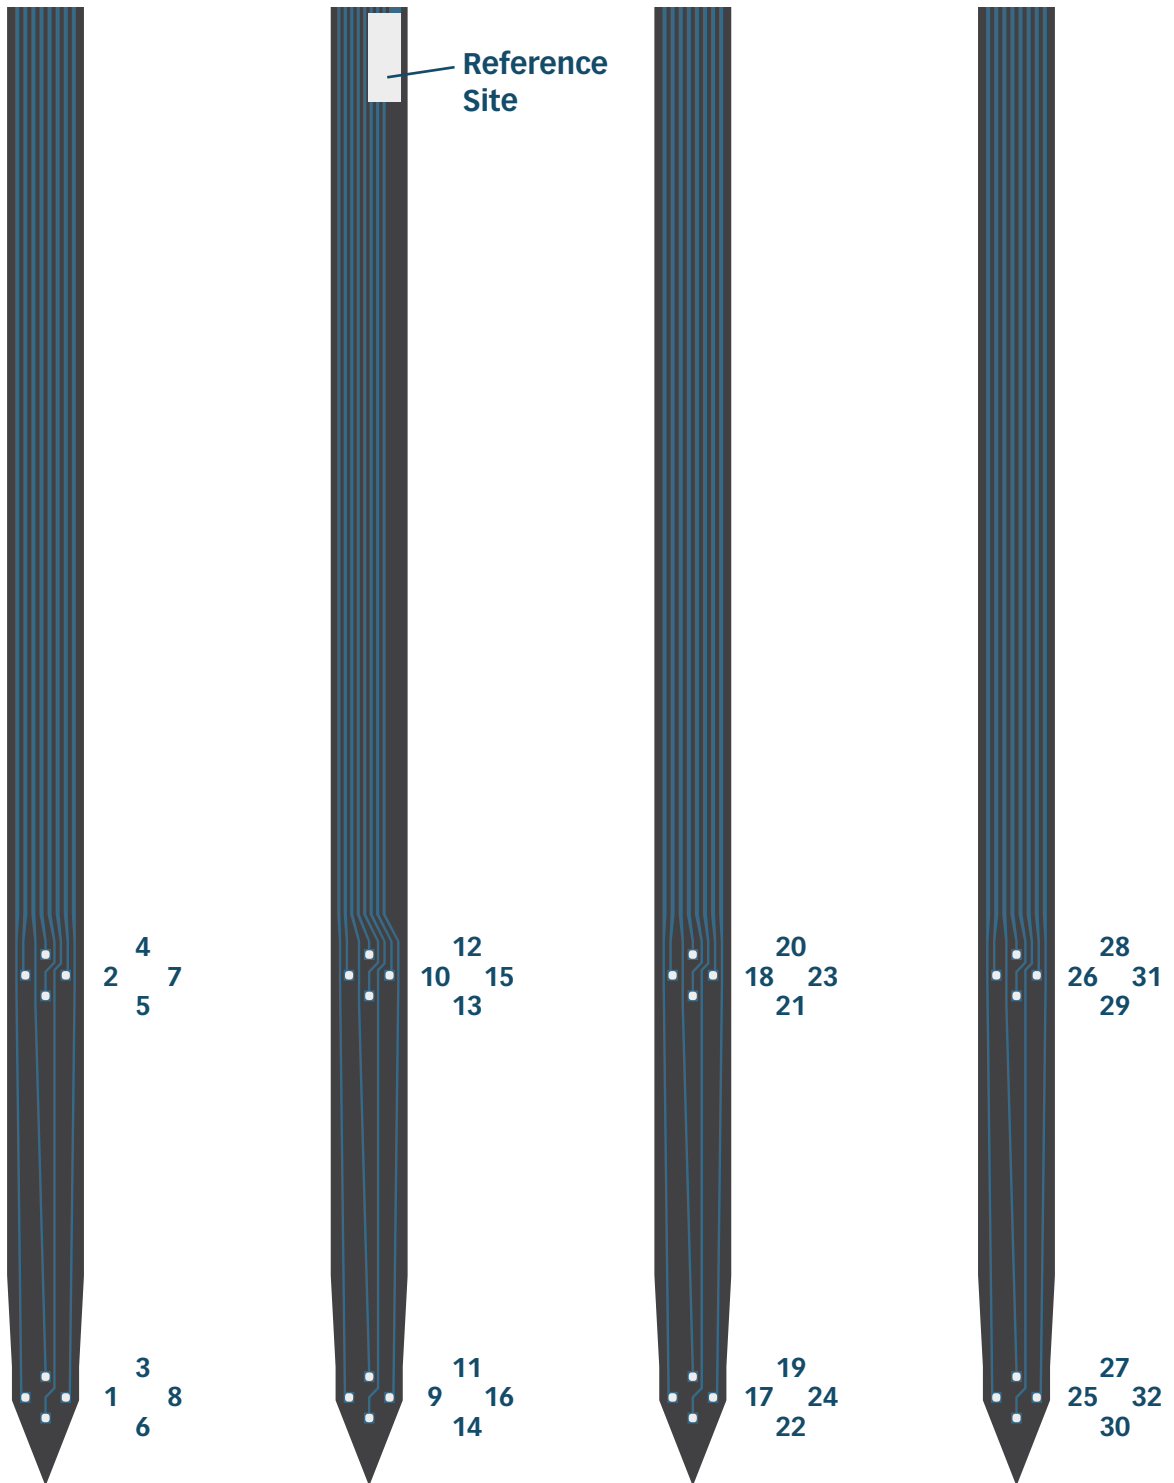



Buzsaki32


p.15

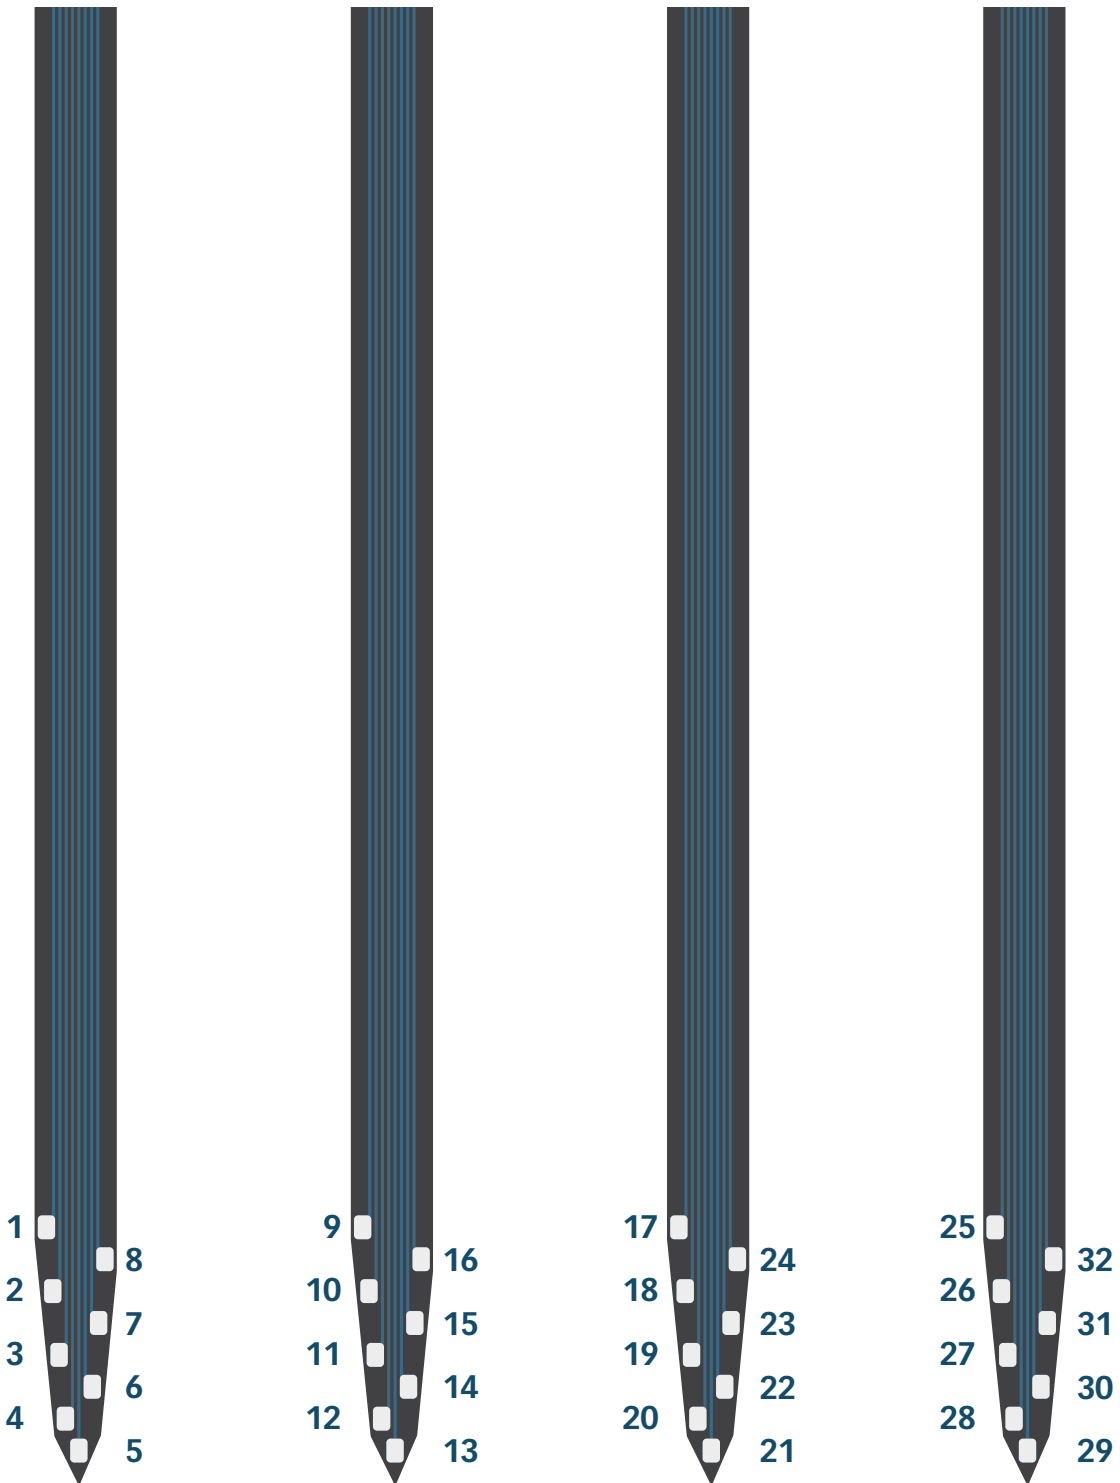



A8x4

p.16

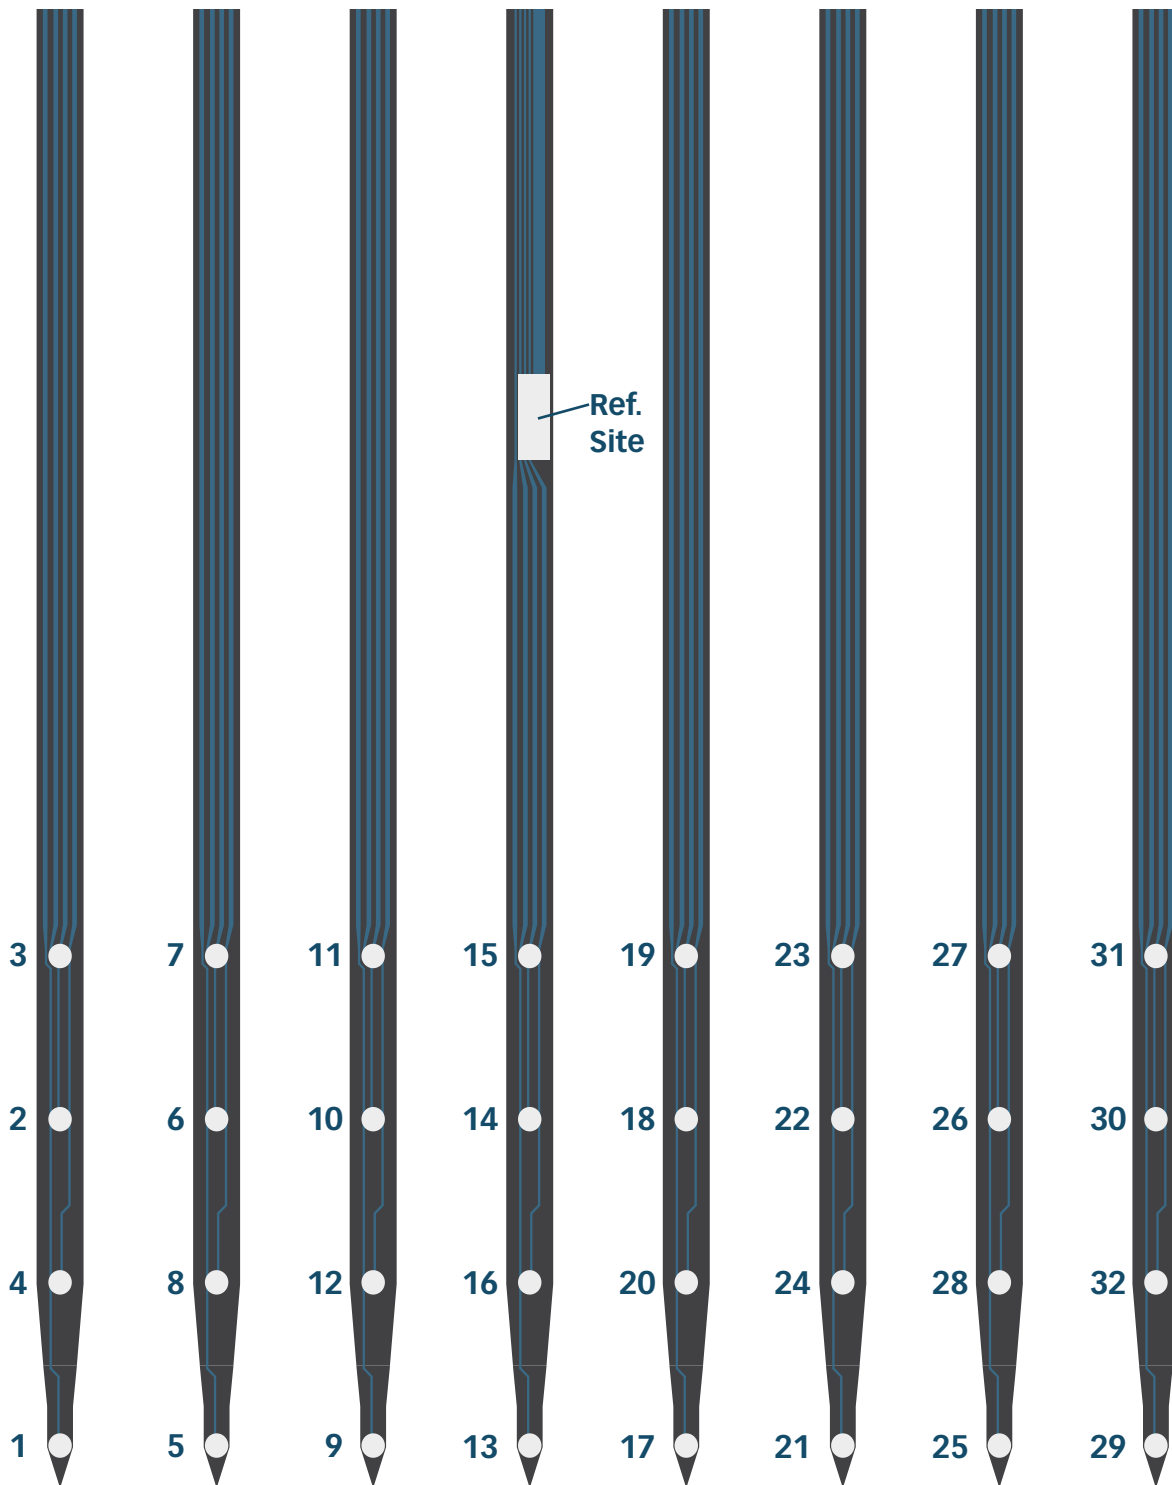



A8x1-tet

p.17

